

## DOORGLASS BLINDS & SHADES


# Ordering the Correct Size Insert

–for replacing existing doorglass



RAISED PROFILE

FLAT PROFILE

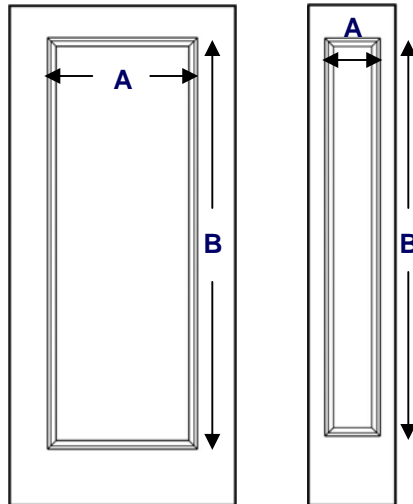

### 1 Determine the frame type around your current doorglass

- RAISED PROFILE
- FLAT PROFILE

Note: Integral inserts can only replace doorglass with raised frame profiles. For flat profiles, see add-on blind/shade options.

#### RAISED FRAME MOULDING WIDTH

- Standard: 1-1/4" to 1-1/2"
- Impact: 1-3/4" to 2"

### 2 Measure the current doorglass dimensions

Raised Frame: Measure from outer frame edge to outer frame edge.  
Flat Frame: Measure visible glass width.

(A) Width \_\_\_\_\_" X (B) Height \_\_\_\_\_"

### 3 Select the correct ODL insert for replacement according to the size chart below.

#### Additional specs to consider:

Door Width \_\_\_\_\_"

Door Thickness must be 1-3/8" to 1-3/4" wide for integral inserts.

#### Size Chart for Replacing RAISED PROFILE Doorglass

(A) Frame Width	(B) Frame Height	ORDER INSERT SIZE
9-1/2" to 10"	37-1/2 to 38"	<b>692</b> – 8x36
8-1/2" to 9-1/2"	65-1/2 to 66-1/2"	<b>694</b> – 7x64
9-1/2" to 10"	65-1/2 to 66"	<b>690</b> – 8x64
15-1/2 to 16-1/2"	65-1/2 to 66-1/2"	<b>624</b> – 14x64
15-1/2 to 16-1/2"	81-1/2 to 82-1/2"	<b>487</b> – 14x80
21-1/2 to 22-1/2"	37-1/2 to 38-1/2"	<b>672</b> – 20x36
21-1/2 to 22-1/2"	65-1/2 to 66-1/2"	<b>687</b> – 20x64
21-1/2 to 22-1/2"	81-1/2 to 82-1/2"	<b>496</b> – 20x80
23-1/2 to 24-1/2"	37-1/2 to 38-1/2"	<b>684</b> – 22x36
23-1/2 to 24-1/2"	65-1/2 to 66-1/2"	<b>686</b> – 22x64
23-1/2 to 24-1/2"	81-1/2 to 82-1/2"	<b>612</b> – 22x80